


## **DT-H203 EXTERNAL LEVER TRIM**






## INSTALLATION INSTRUCTION

1. Sketch Map of Installation.

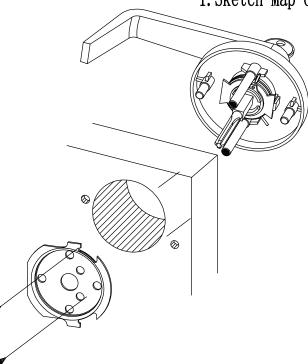

2. Drill hole.

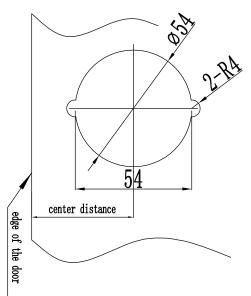

- 3. Size of central diatance for single door.
  - door doorframe

    central distance 60

    the edge of doorframe

- (1) Keep the spindle horizontally before installation.
- (2) If insert the key and turn it counter-clockwise, the latch bolt will not retract by pressing the handle. And you can take out the key after turning it to orginal position.
- (3) If insert the key and turn it clockwise, the latch bolt will retact by pressing the handle. And you can take out the key after turning it to original position.
- (4) The spindle is contractable for different door thickness.

Size of central diatance for double door.

